



Breastgirth size chart			
	Small	Medium	Large
Elastic width	1.5	2	2
Top strap - elastic	12	14	16
Top strap - leather	20	20	20
Bottom strap - elastic	16	20	22
Bottom strap - leather	16	16	16
Girth strap (loop 4" min)	24	28	32
All measurements in inches			

The Crossover Breastgirth has been specifically designed to be adjusted to as wide a range of horses as possible in each size group.

The leather straps are all generously cut to allow the maximum adjustment.

There are a minimum number of holes pre – punched, but extra ones can easily be added at home with the use of a standard hole punch.

If the individual straps are too long for a horse that is at the smaller end of the scale in any size group, these can be easily shortened for you in our workshop.