




To adjust the Webber length, twist the T bar hook through 45 degrees and unhook from slot.
Rehook into selected slot and twist until perpendicular.
Pull down firmly on the T bar to secure it place in the slot.



Pull the keeper down firmly over the hook.
NB – older (pre 2008) versions of the Bates Webber do not have the leather keeper.

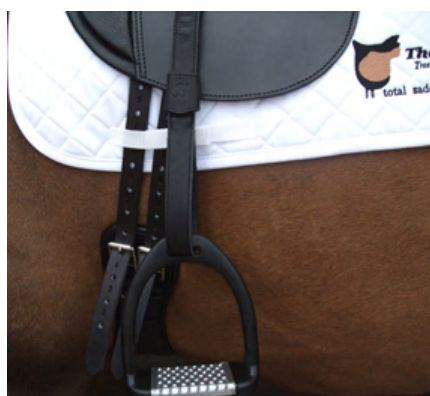

The stirrup should be attached with the rolled edge of the tread outwards to face backwards when positioned onto the foot.
The Webber is shown here with the soft hide side facing outwards, but flap scuffing is reduced if the hide is against the flap leather.



To fasten the Webbers when not in use, hook the T bar into the slot near the top loop of the Webber.



The stirrup can then be run up and the strap tucked through in the conventional way.
It is important to fasten the stirrups up when the rider is not mounted to avoid them catching on any obtrusions.